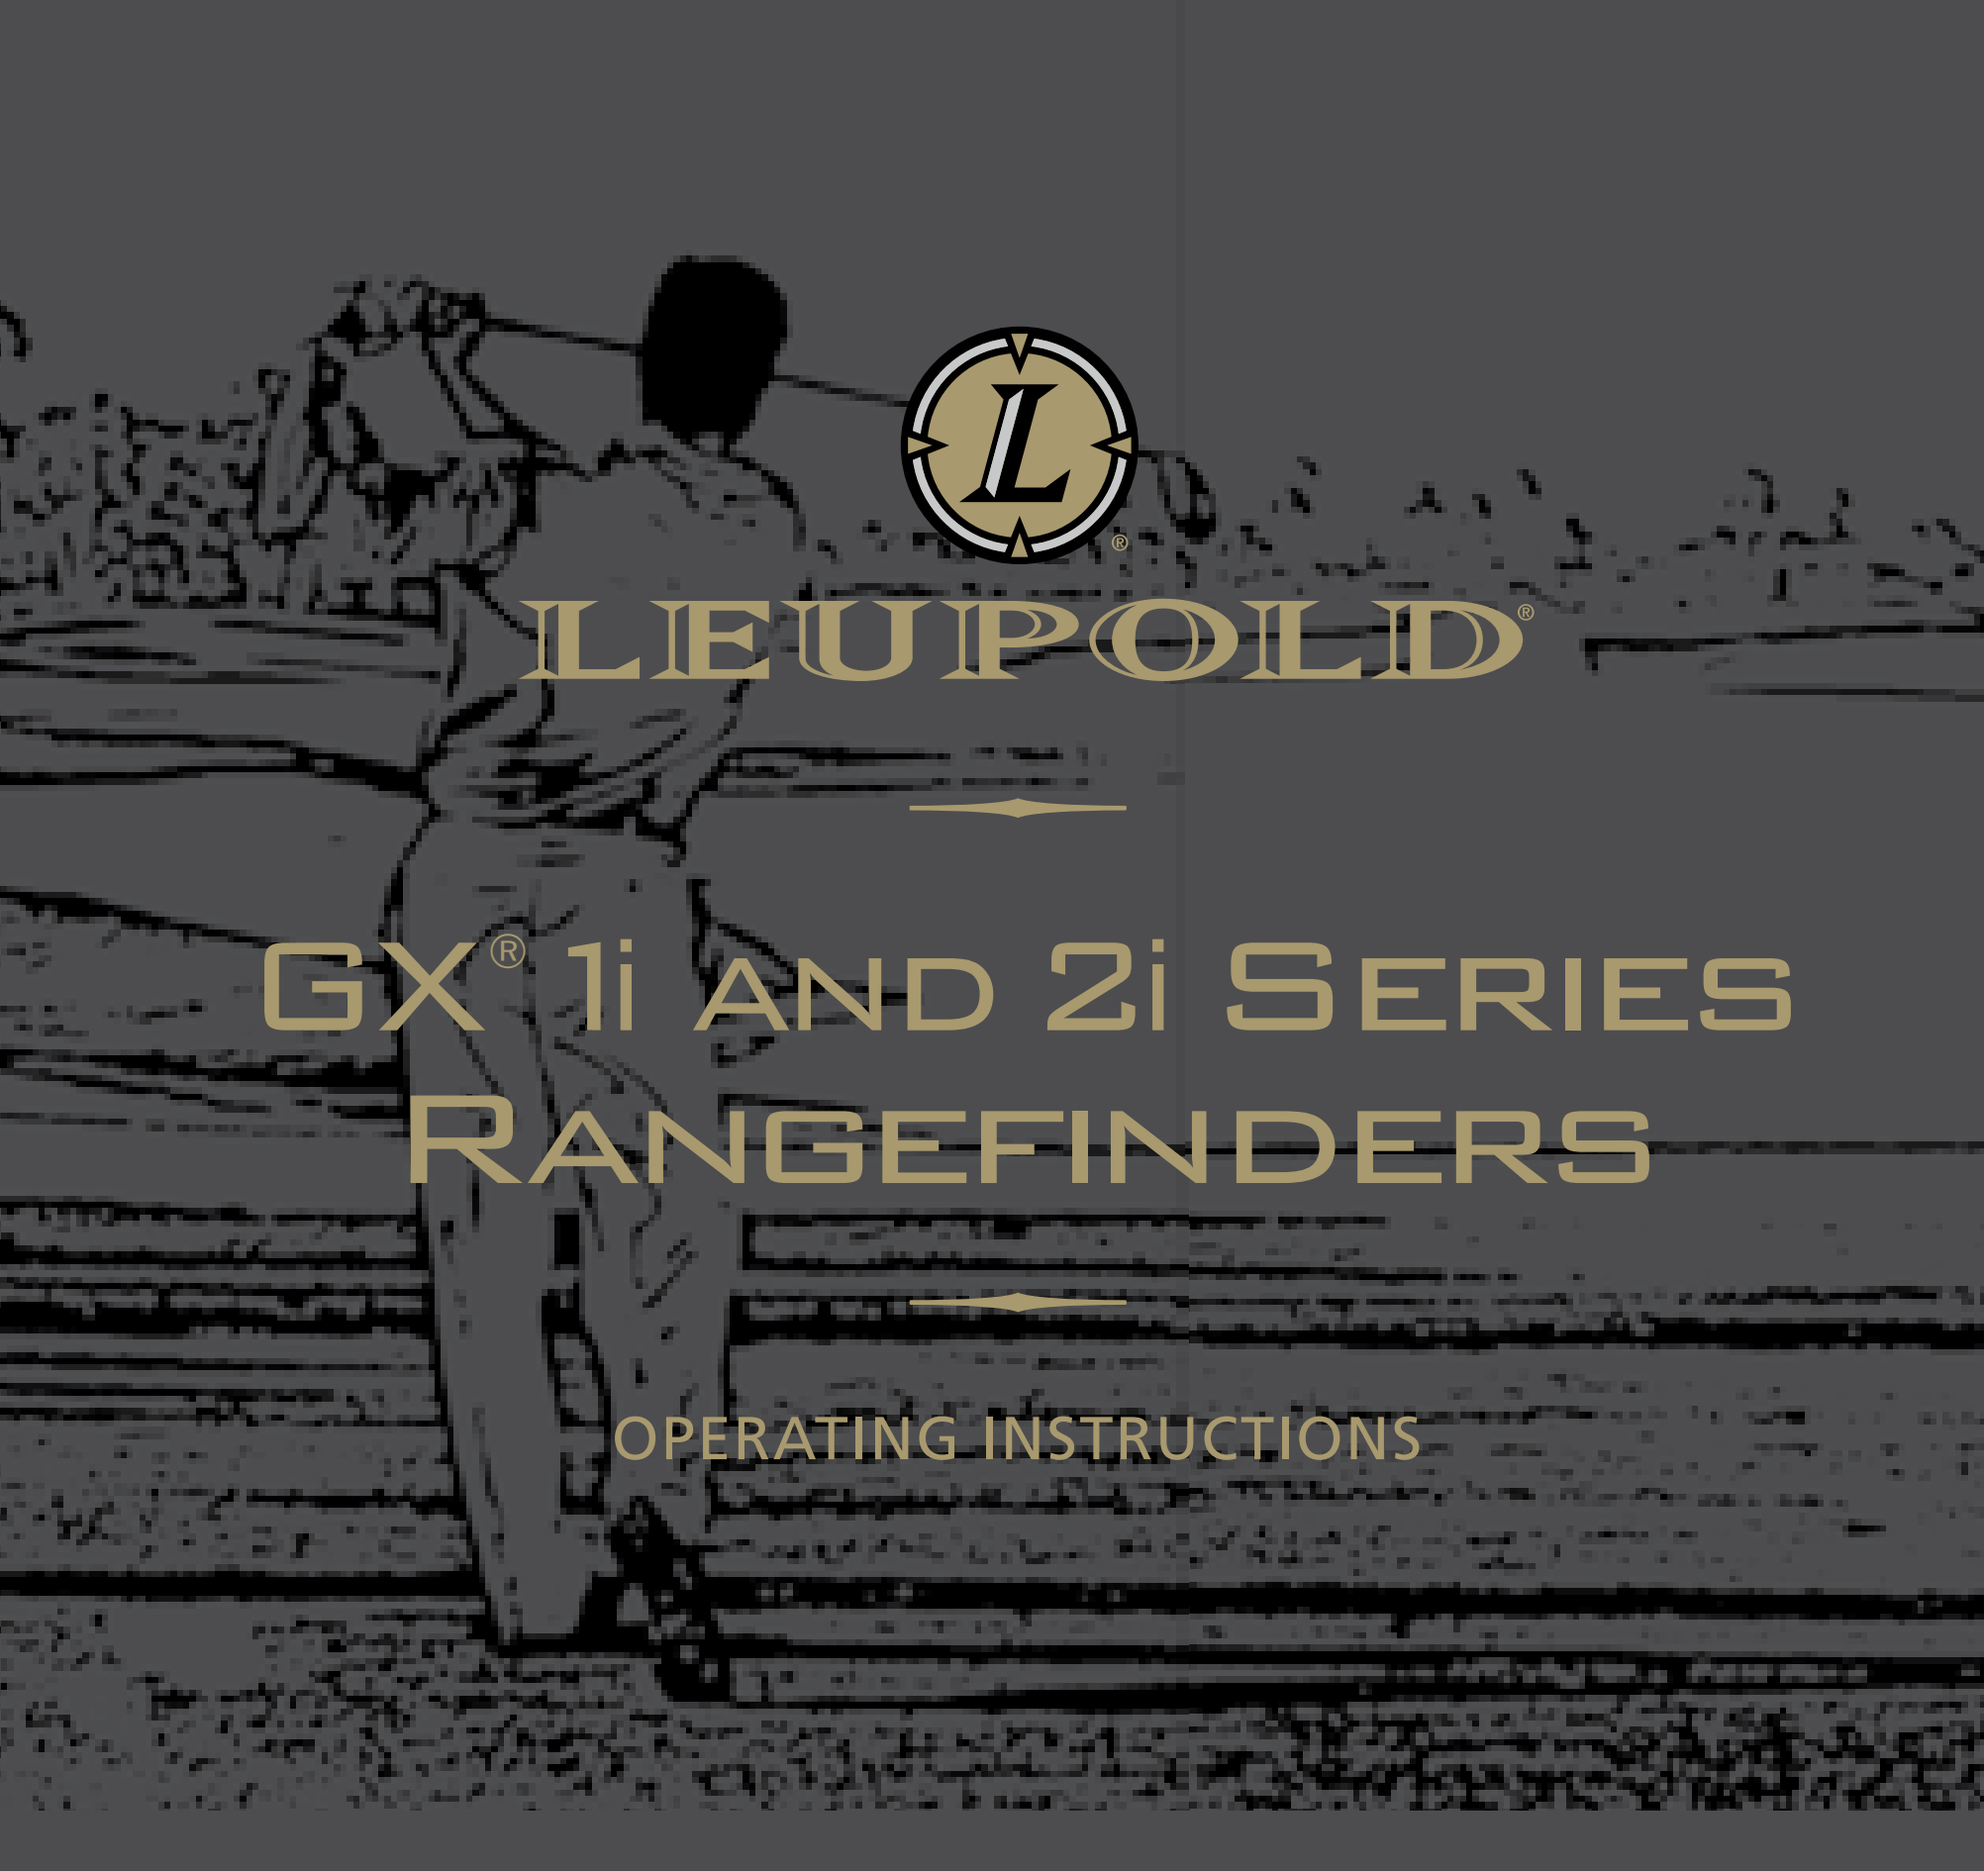

LEUPOLD®

GX® 1i and 2i Series Rangefinders

Operating Instructions

Table of Contents

Introduction . . . . . Page 1

About Leupold . . . . . Page 3

Accuracy . . . . . Page 5

How GX Rangefinders Work . . . . . Page 6

GX Rangefinder Specifications . . . . . Page 9

Operation . . . . . Page 10

Using Prism Lock . . . . . Page 14

Trouble Shooting . . . . . Page 41

Cleaning/Maintenance . . . . . Page 43

Warranty/Repair . . . . . Page 44

Introduction

Congratulations! You have purchased a Leupold® GX® Series digital laser rangefinder that has been crafted by Leupold's engineers and designers to be the best rangefinder on the market, and to provide you with years of solid performance on the course. Following are instructions detailing the proper use and employment of your GX Series rangefinder. To ensure top performance for the life of the product, please read these instructions before operating your GX-1i or GX-2i rangefinder.

Your new Leupold GX Series digital laser rangefinder is a revolutionary, range-finding device that incorporates advanced digital electronics with state-of-the-art trajectory algorithms. The next generation Digitally eNhanced Accuracy (DNA®) engine incorporates additional signal processing techniques to generate better ranging distance with more accurate rangefinding. GX-2i features include an inclinometer, and PinHunter Laser Technology. Another truly innovative and unique feature is True Golf Range™ (TGR®), which is available on the GX-2i TGR model. TGR is a marriage of laser ranging, an inclinometer,

and advanced trajectory calculations. The result is distance measurements accurate to less than a yard, no matter the angle at which the laser is fired.

About Leupold & Stevens, Inc.

It's a decidedly American story: in 1907, a young German immigrant named Fred Leupold set up a one-man shop at 5th and Oak Streets in Portland, Oregon, repairing optics for surveying equipment. The small company survived the First World War and the Great Depression, however, it was the Second World War that would forever change the company. Working with the U.S. Army on a riflescope and the Navy on optics for use aboard ships, the engineers at Leupold learned the secrets of waterproofing and durable construction that would completely change the world of sports optics.

Leupold & Stevens, Inc. is still family-owned, though the focus has turned from land surveying to helping people across the globe survey their environments with innovative, high-performance optics and accessories. Leupold optics are renowned for their unchallenged ruggedness, absolute waterproof integrity, and their vastly superior optical quality. More than a century of observation and optical experience has gone into every product we produce, and we think the results are well worth the extra effort required to achieve this level of quality.

In true American style, the philosophical foundation laid in our early years has served us well as we've grown and changed over the decades. In fact, the firm's founder established the clarity of purpose that we see at Leupold & Stevens today:

"We solemnly promise never to let down on quality, the customer is entitled to a square deal."

Markus Friederich "Fred" Leupold

Accuracy

The ranging accuracy of the GX-1i and GX-2i rangefinders is +/- .5 yard/meter. The maximum effective range depends upon a number of factors including lighting conditions and air quality, but the most important factor is the reflectivity of the target. For most objects, the maximum distance is 600 yards, while for highly reflective targets, distances of 800 yards can be obtained.

	MAXIMUM RANGE	
CONDITION	**GX-1i**	**GX-2i**
Reflective Target (yd/m)	800/732	800/732
Trees (yd/m)	600/550	600/550
Pin (yd/m)	400/365	400/365

How it Works

The Leupold GX series of rangefinders emit a series of invisible, infrared energy pulses that are reflected off the selected target back to the optical unit. State-of-the-art circuitry and precision computing circuits are used to calculate the distance instantaneously by measuring the time it takes for each pulse to travel from the GX rangefinder to the object and back.

Surface texture, color, size, and shape of the target all affect reflectivity, which in turn affects the maximum range of the instrument. As a rule of thumb, brightly colored targets are much more reflective than darker targets, with black being the least reflective color. A shiny surface is more reflective than a dull surface. Smaller targets are more difficult to range than larger targets. Light conditions, haze, fog, rain, and other environmental conditions can all affect ranging performance. Any factor which degrades air clarity will reduce the maximum effective range. Bright light shining directly on the lenses reduces the effectiveness, producing shorter maximum ranges than those possible on darker (overcast) days. The steadier the GX unit is held, the greater the maximum distance.

Safety and Operation Precautions

The Leupold GX-1i and GX-2i 6x23mm rangefinders employ an eye safe FDA Class 1 laser in their operation. Outside of the United States, the IEC is the governing body over laser products and has classified the GX rangefinders as Class 3R. Even so, there are a few precautions that are important to remember:

- Do not depress the POWER button while aiming at a human eye or while looking into the optics from the objective side
- Do not leave the GX within the reach of small children
- Do not take the product apart as it has a self-protection device in the electronic control module and may cause an electric shock
- Do not attempt to use any power source other than a CR-2 battery (or equivalent) — the GX is designed to prohibit accessing any other external power supply

Safety and Operation Precautions (cont.)

- **Caution:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser radiation exposure
- When you see the display through the eyepiece, please be aware that the product is active and emitting an invisible laser and the laser aperture should not be pointed toward anyone. The unit will produce an audible "click" when the power button is activated to notify the user that the rangefinder is emitting an invisible laser
- Read this instruction manual in its entirety before using this rangefinder. If the product is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired

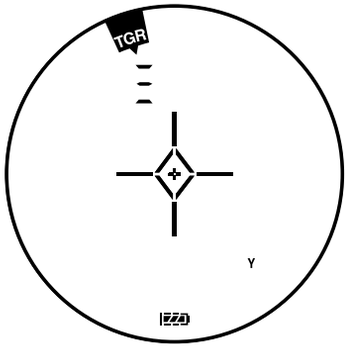

GX-2i Activated

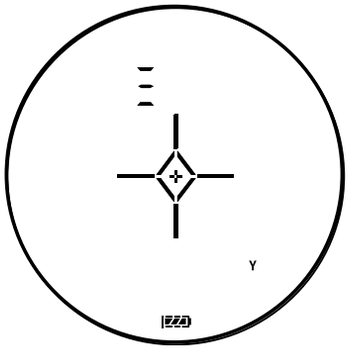

GX-1i Activated

(Display as seen through the eyepiece)

Specification

The GX Series of digital laser rangefinders provides a variety of useful modes to tailor performance to the conditions you experience in the field. Model features are identified on the following pages.

	GX-1i	GX-2i
Magnification	6x	6x
Inclinometer	No	Yes
TGR® (True Golf Range™)	No	Yes
7 Selectable Aiming Reticles	Yes	Yes
Quick Set Menu	Yes	Yes
Line of Sight Distance	Yes	Yes
Yards/Meters	Yes	Yes
Fog Mode	Yes	Yes
Prism Lock	Yes	Yes
Scan Mode	Yes	Yes
Battery Life	>6000 Actuations	>6000 Actuations
Weight (with battery)	6.2 oz	6.2 oz
Dimension (Inches)	4" x 2.75" x 1.5"	4" x 2.75" x 1.5"
Low Battery Indicator	Yes	Yes
Warranty	1 Year	1 Year
Waterproof	Yes	Yes

Operation

QUICK SET MENU™

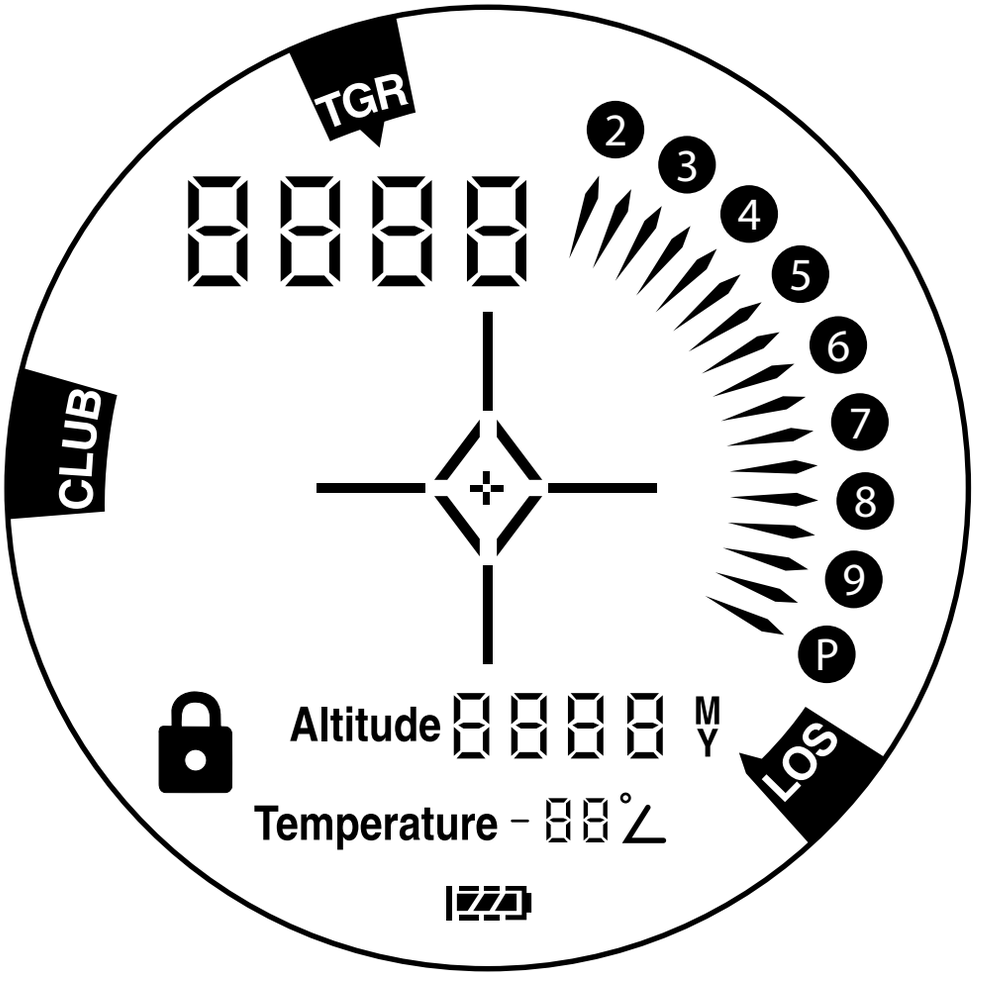

*GX-2i display shown with all possible characters visible

GX-1i & GX-2i

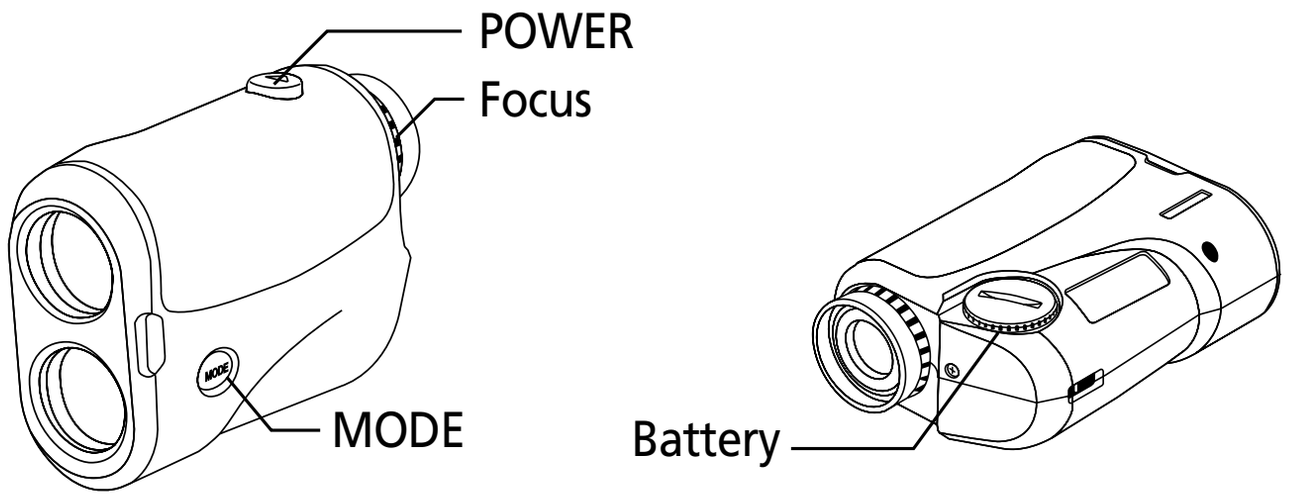

The GX-1i and GX-2i have two buttons: POWER and MODE. When you initially push the POWER button, the display is activated and the unit is ready for ranging. Press the Power button a second time to range, or hold the Power button depressed to scan. Scanning automatically updates the display. When ranging without a steady rest at long distances, you can easily differentiate the pin

from other potential targets in the distance behind the pin. The GX-1i and GX-2i series rangefinders feature PinHunter Laser Technology, which will always provide you the distance measurement to the closet object ranged. When you press and hold the MODE button for 1 second then release it, the Quick Set Menu™ is prepared for navigation. To set or activate a mode, you must advance to that function by pressing the MODE button until that function is displayed. To activate a mode, press the POWER button, the icon will display steadily and the word "On" will appear in the bottom portion of the display. Pressing the POWER button again will turn that mode off; displaying the word "OFF" in the bottom portion of the display. Each subsequent depression of the POWER button will toggle that function between on and off. If this is the last mode to be set, allowing the rangefinder to sit idle for 20 seconds will cause an automatic power-off, saving all selections. If additional modes require activation/deactivation, simply press MODE to continue through the Quick Set Menu.

Pressing and holding MODE for at least 1 second at any time will exit the Quick Set Menu, save all previous changes, and prepare the rangefinder for immediate use.

Hold POWER and MODE simultaneously for at least 10 seconds to reset factory settings.

Using Prism Lock

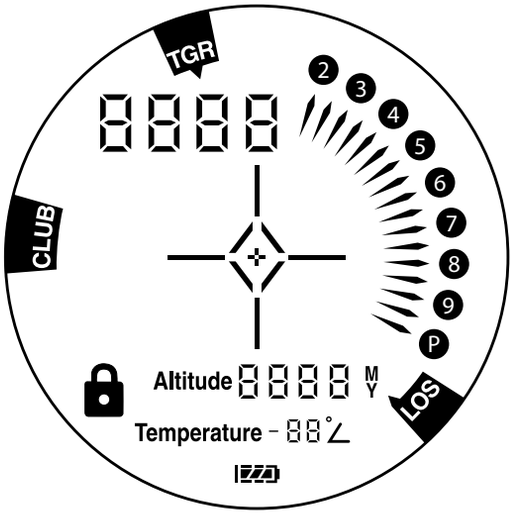

Many courses have highly reflective prisms included in key course features. These prisms provide your GX rangefinder with an extremely intense return signal, allowing it to lock onto the prism quickly and provide instant feedback that you have accurately ranged the intended target. When using scan mode to range a course feature with integral prisms, your GX range-finder will produce an audible beep and the lock icon will be shown in the lower left portion of the display. Prism Lock is always activated and will automatically detect the presence of prisms in course features when scanning at a distance of 25 yards or greater.

NOTE: *Prism lock is only active when in scan mode.*

Note: The audible beep can be turned on/off utilizing the Quick Set Menu. Simply toggle through the functions using the mode button until “bEEP” is shown in the display. Press POWER to select on or off.

FUNCTION 1: FOG MODE

The Fog Mode can be used in foggy/rainy conditions to screen out false readings from raindrops or other atmospheric interference to provide an accurate range.

When entering the Quick Set Menu, Fog Mode is the first mode encountered. The word “Fog” will appear in the upper display and the lower display will show whether it is on or off. Press POWER to toggle Fog Mode on and off. Press MODE to save your selection and move on to the next function.

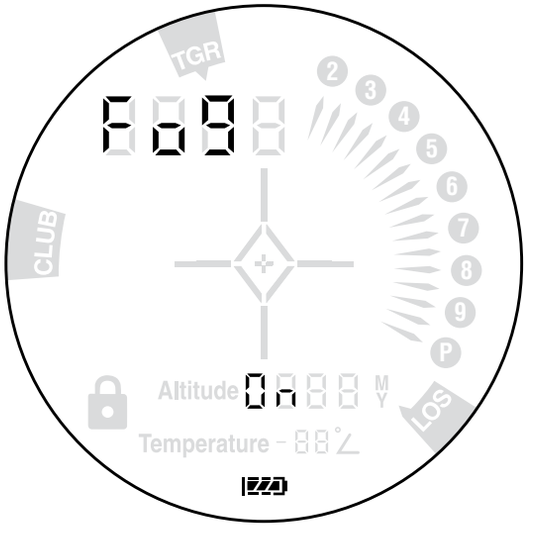

How do I activate Fog Mode?

1) Press POWER to activate the rangefinder.

2) Press and hold MODE for at least 1 second to enter the Quick Set Menu; release the MODE button, the word “Fog” will now appear in the upper display.

3) While the word “Fog” is displayed, press and release POWER as necessary until the word “On” is displayed in the lower portion of the display.

4) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another function, press and release MODE until the appropriate icon is displayed.

FUNCTION 2: TRUE GOLF RANGE (TGR) (GX-2i ONLY)

TGR is an adjusted range that will compensate for uphill shots that play long and downhill shots that play short. TGR is calculated from the line of sight distance, incline or decline, and current temperature and altitude. TGR will display the adjusted range the golfer should play to. For example, if you have a lie 150 yards from the pin, but the green falls 6 degrees above your ball, you will play the shot as if it were 164 yards.

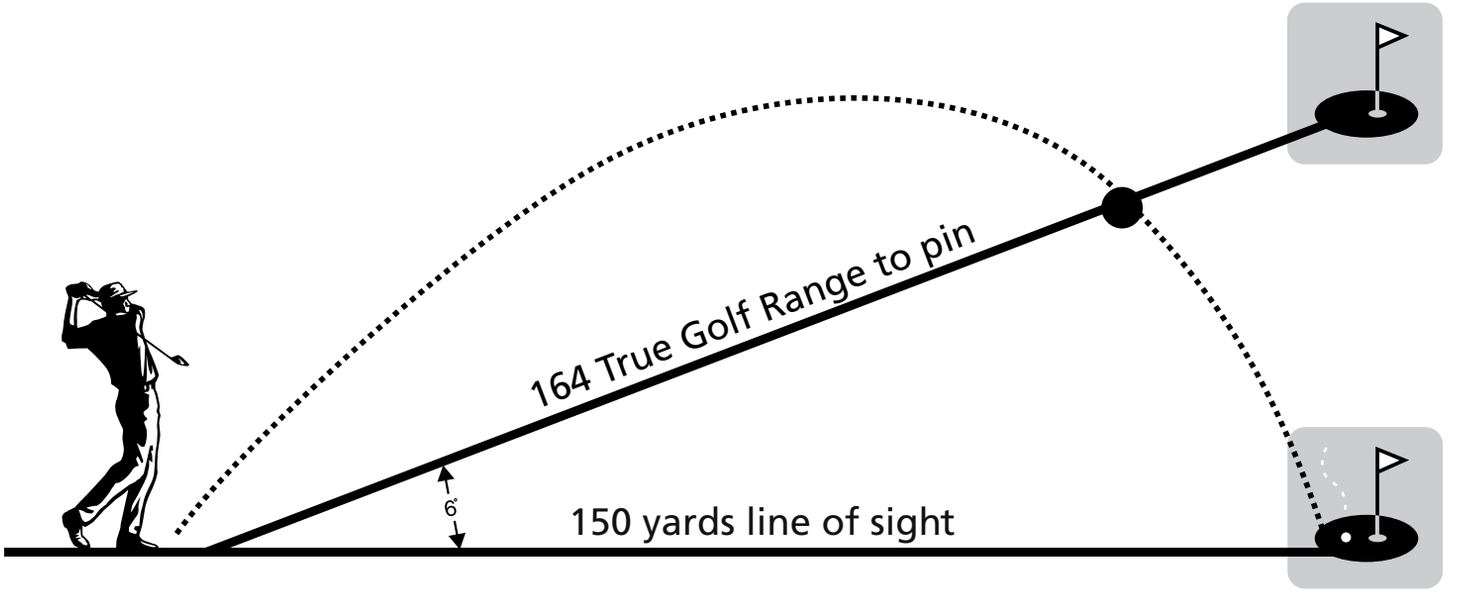

When entering the Quick Set Menu, TGR is the second mode encountered. The TGR icon will be displayed in the upper display, and the lower display will show whether it is on or off. Press POWER to toggle TGR on and off. Press MODE to save your selection and move on to the next function.

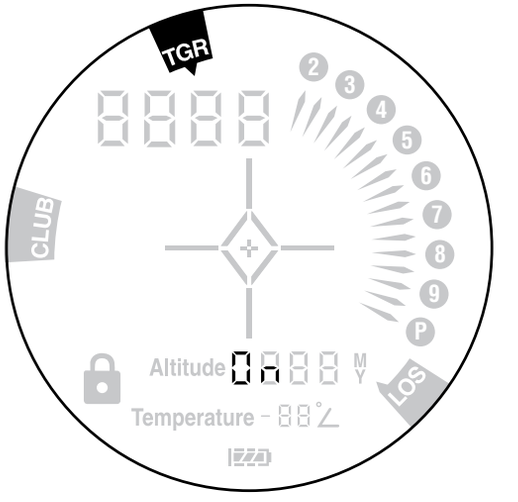

NOTE: *Turning TGR off will also disable the Club Selector and inclinometer display; all distance readings will be line-of-sight (LOS) measurements.*

HOW DO I ACTIVATE TGR? (GX-2i ONLY)

1) Press POWER to activate the rangefinder.
2) Press and hold MODE for at least 1 second to enter the Quick Set Menu; press and release MODE one more time to advance to TGR mode. The TGR icon will now be displayed.
3) While the TGR icon is displayed, press and release POWER as necessary until "on" is displayed in the lower portion of the display.
4) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply

press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another feature, press and release MODE until the appropriate icon is displayed.

FUNCTION 3: CURRENT TEMPERATURE INPUT (GX-2i ONLY)

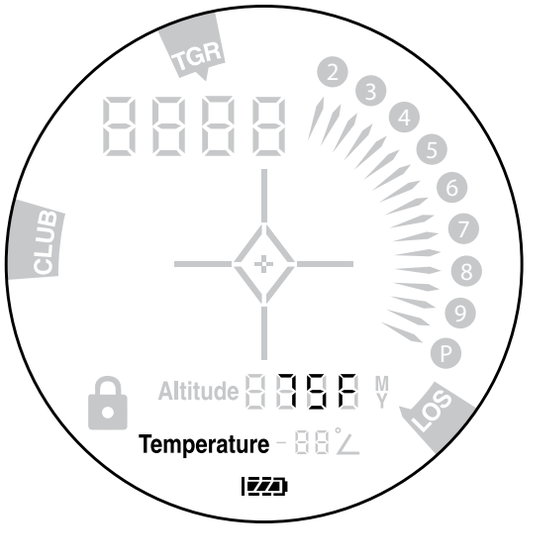

Temperature is one of the factors used to determine TGR ranges; inputting the current temperature will increase the accuracy of your TGR measurement. The default temperature setting is 75 degrees F. After activating TGR, the last saved temperature will be flashing in the bottom portion of the display. Press POWER to set the temperature to match the current conditions; each depression of POWER will increase the temperature setting by 5 degrees. The total range of available temperature settings is 30 degrees to 120 degrees F. Press MODE to save your setting and move to the next function.

NOTE: *If yards is selected, the temperature will automatically be measured in Fahrenheit. If meters is selected, the temperature will be measured in Celsius.*

HOW DO I MANUALLY INPUT THE CURRENT TEMPERATURE? (GX-2i ONLY)

1) Press POWER to activate the rangefinder.
2) Press and hold MODE for at least 1 second to enter the Quick Set Menu.
3) Verify that TGR is turned on; if TGR is not activated, you will not be able to enter the current temperature. To activate TGR, see "How do I activate TGR?" (page 17).
4) Press and release MODE again; the last saved temperature will be flashing in the lower portion of the display.
5) While the temperature is flashing, press and release POWER to change the current temperature setting to match the current conditions. Each depression of POWER will increase the temperature setting by 5 degrees until 120 degrees F has been reached, at which time the setting will return to 30 degrees F and begin increasing again.
6) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another feature, press and release MODE until the appropriate icon is displayed.

FUNCTION 4: ALTITUDE INPUT (GX-2i ONLY)

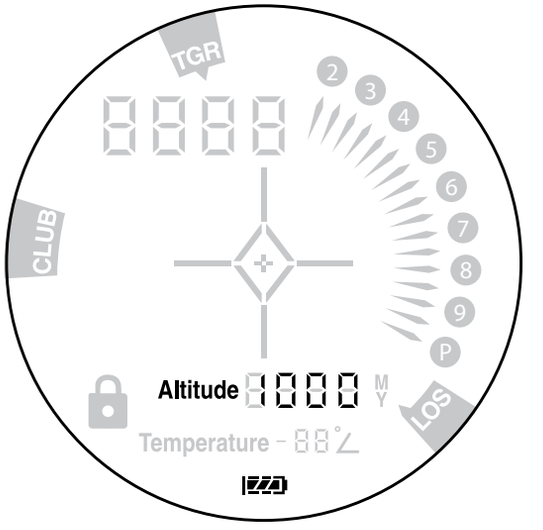

Altitude is one of the factors used to determine TGR ranges; inputting the local elevation/altitude will increase the accuracy of your TGR measurement. The default altitude setting is 1000 feet, and will be shown in the lower portion of the display. After activating TGR, the last saved current temperature will be displayed, followed by the last saved current altitude. Press POWER to set the altitude to match current conditions; each depression of POWER will increase the altitude setting by 500 feet. The total range of available altitude settings is 0 to 9999 feet. Press MODE to save your input and move to the next function.

HOW DO I MANUALLY INPUT THE CURRENT ELEVATION? (GX-2i ONLY)

1) Press POWER to activate the rangefinder.
2) Press and hold MODE for at least 1 second to enter the Quick Set Menu.

3) Verify that TGR is turned on; if TGR is not activated, you will not be able to enter the current temperature or altitude. To activate TGR, see “How do I activate TGR?” (page 17).

4) Press and release Mode; the last saved current temperature will now be flashing. Press and release MODE again and the last saved current altitude will be flashing.

5) While the altitude is flashing, press and release POWER to change the current altitude setting to match current conditions; each depression of POWER will increase the altitude setting by 500 feet until 9999 has been reached, at which time the setting will return to 0 and begin increasing again.

6) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another feature, press and release MODE until the appropriate icon is displayed.

FUNCTIONS 5 & 6: CLUB SELECTOR & DISTANCE INPUT (GX-2i ONLY)

When activated, the Club Selector function recommends the proper iron for the current distance, shot angle, environmental conditions, and multiple other factors. This will be shown by a pointer leading to the appropriate club on the right side of the display. If the TGR distance falls between two particular clubs, or is too long/short for any of the available distances, this will be indicated as well.

For example, if the TGR distance falls directly between your 5-iron and 6-iron, each of the clubs will be highlighted, as well as the pointer between them.

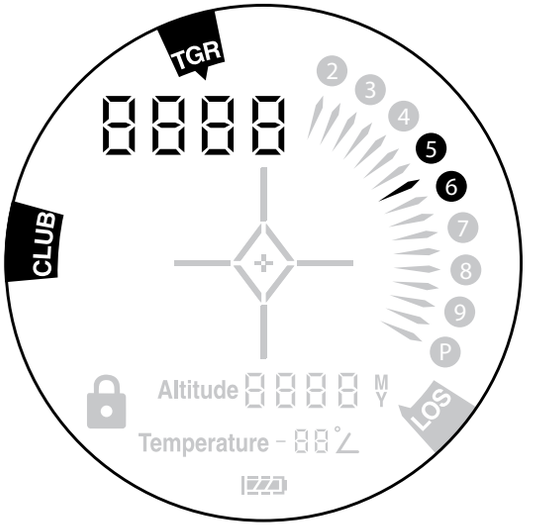

For shots longer than recommended with a 2-iron, the 2-iron will be highlighted and the 3 closest pointers will flash.

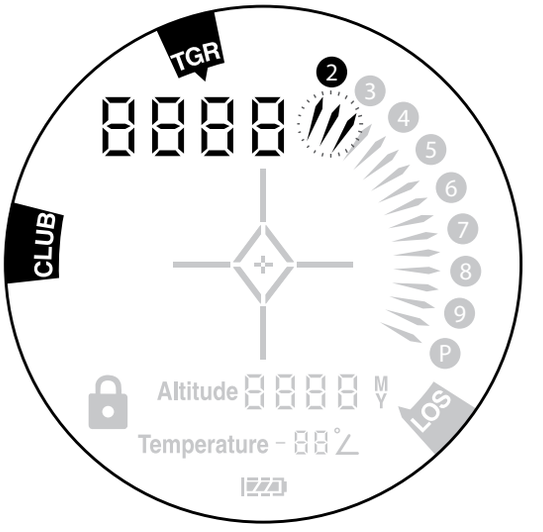

The same is true for shots under the recommended distance for your pitching wedge; the pitching wedge will be highlighted and the 3 closest arrows will flash.

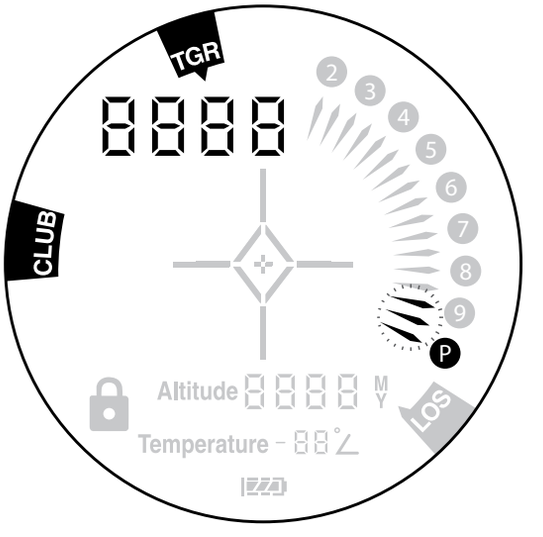

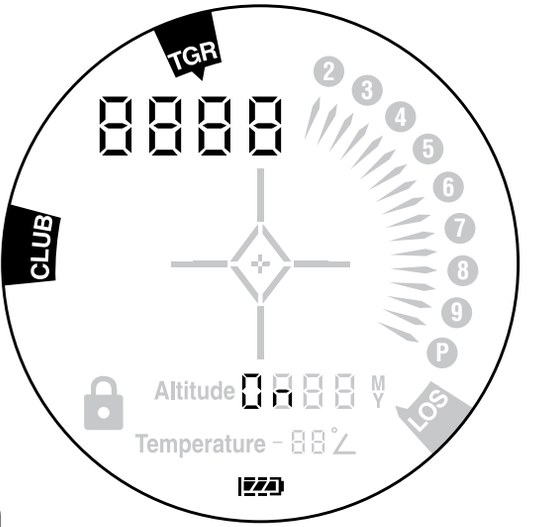

To activate the Club Selector, TGR must be activated. Use MODE to navigate through the Quick Set Menu until the Club icon is displayed; the lower display will show whether it is on or off. Press POWER to toggle the Club setting on or off. Press MODE to save your selection and move to the next function.

Critical to accurate club recommendations is the known striking distance of the user with specific clubs. By inputting the actual distance obtained with a few clubs, a specialized algorithm accurately determines the distance obtained with others. The actual distance obtained from an 8-iron, 6-iron, and 4-iron shot should be input as accurately as possible. If no club distance is input, the Club Selector will automatically default to the preset distances (130 yards for an 8-iron, 150 yards for a 6-iron, and 170 yards for a 4-iron). In addition to the striking distances, the temperature and altitude at which these distances were measured must be input following the distance input process. By entering the environmental conditions in which the specific distances were obtained, the Club Selector will be able to adjust the recommended iron according to the current conditions.

NOTE: *Though we strongly recommend inputting the specific distances obtained with each of the irons mentioned above, the specialized algorithms used by the GX-2i will make logical assumptions about the remaining club(s) if specific distances are not known for one or more of the remaining clubs.*

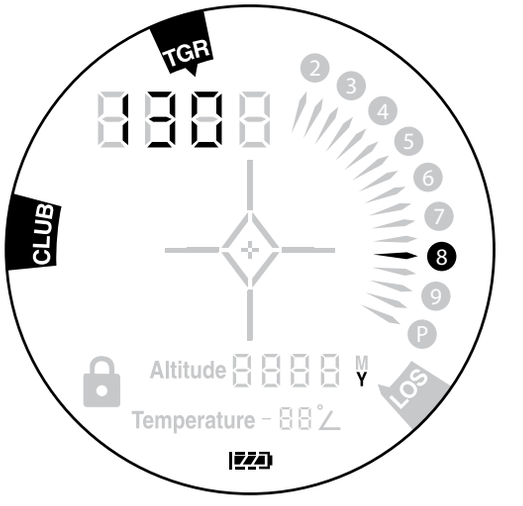

TGR and the Club Selector must be activated to input the specific distances achieved with each club. After activating both TGR and the Club Selector, pressing and releasing MODE will begin the process of entering your specific 8-iron distance. The 8-iron symbol and pointer will be highlighted, as will the last saved distance for this club. Press POWER to toggle through the 8-iron distance settings. The default setting is 130 yards. Pressing POWER will toggle through a range of 60 yards to 200 yards in 5-yard increments.

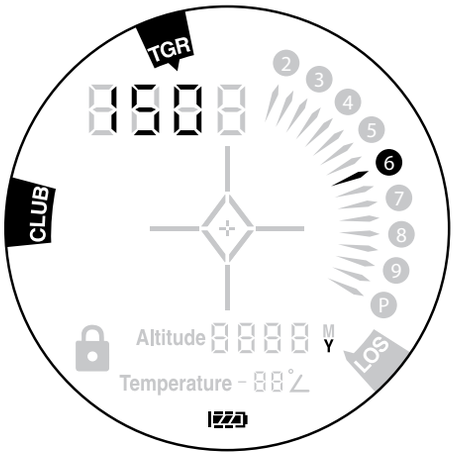

When your selection is shown in the upper numeric display, press MODE to save your selection and move on to the 6-iron.

The 6-iron symbol and pointer will now be highlighted. Press POWER to begin toggle through the 6-iron distance settings. The default setting is 150 yards. Pressing POWER will toggle through a range of 80 yards to 220 yards in 5-yard/meter increments. When your selection is shown in the upper numeric display, press MODE to save your selection and move on to the 4-iron.

NOTE: *You cannot input a distance value less than or equal to the previous club. For example, if you choose 155 yards for your 8-iron, the lowest available distance for your 6-iron will be 160 yards.*

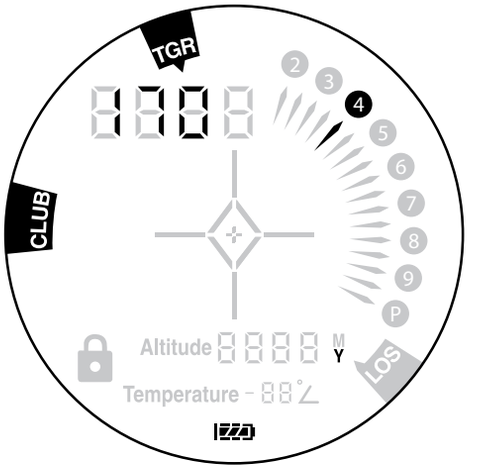

The 4-iron symbol and pointer will now be highlighted. Press POWER to toggle through the 4-iron distance settings. The default setting is 170 yards. Pressing POWER will toggle through a range of 100 yards to 240 yards in 5-yard/meter increments. When your selection is shown in the upper numeric

display, press MODE to save your selection and move on to the temperature input (the temperature at which these distances were measured).

NOTE: *You cannot input a distance value less than or equal to the previous club. For example, if you choose 175 yards for your 6-iron, the lowest available distance for your 4-iron will be 180 yards.*

Once the specific distances obtained with each of the clubs above has been input, you will be asked to input the temperature and elevation at which these distances were obtained. Following the input of your measured 4-iron striking distance, the next depression of MODE will begin the process of entering the temperature at which this distance was obtained.

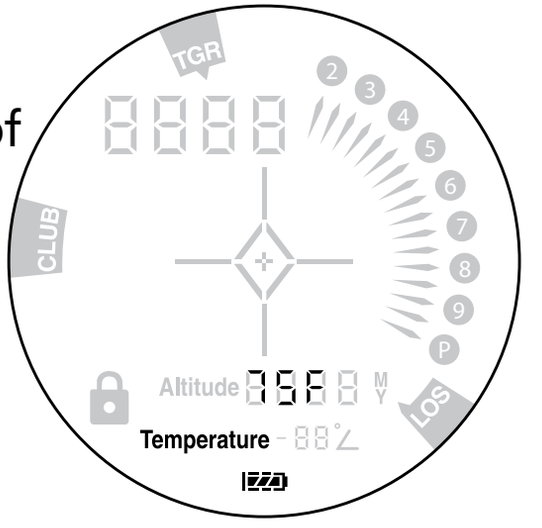

The last saved temperature will be flashing in the bottom portion of the display. Press POWER to toggle through the temperature settings. The default setting is 75 degrees F. Pressing POWER will toggle through a range of 30 degrees to 120 degrees F in 5 degree increments. When the appropriate temperature is displayed, press MODE to save your selection and move on to the altitude input.

The last saved altitude will be flashing in the bottom portion of the display. Press POWER to toggle through the altitude settings. The default setting is 1,000 feet. Pressing POWER will toggle through a range of 0 feet to 9999 feet in 500 foot increments. When the appropriate altitude is displayed, press MODE to save your selection and move to the next mode (yards/meters).

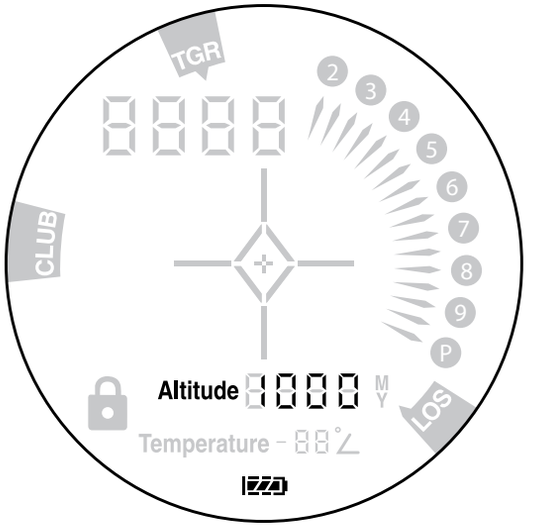

HOW DO I ACTIVATE THE CLUB SELECTOR? (GX-2i ONLY)

1) Press POWER to activate the rangefinder.
2) Press and hold MODE for at least 1 second to enter the Quick Set Menu.
3) Verify that TGR is turned on; if TGR is not activated, you will not be able to activate the Club Selector. To activate TGR, see “How do I activate TGR?” (page 17).

4) Press and release MODE to input the current temperature and altitude as described on pages 19-22.

5) Press and release MODE again to progress until the Club Selector icon is shown on the left side of the display.

6) While the Club Selector icon is displayed, press and release POWER as necessary until the word "On" is displayed in the lower portion of the display.

7) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another feature, press and release MODE until the appropriate icon is displayed.

NOTE: *If this is the first time that the Club Selector feature has been used, you must continue and input the striking distance of your 8, 6, and 4-iron, as well as the temperature and altitude at which these distances were measured. The input information will be saved for future use. If this is not completed, the GX-2i will use the default settings (130 yards for an 8-iron, 150 yards for a 6-iron, and 170 yards for a 4-iron).*

HOW DO I INPUT THE STRIKING DISTANCE OF THE 8, 6 AND 4-IRON? (GX-2i ONLY)

NOTE: *Though we strongly recommend inputting the specific distances obtained with each of the irons mentioned above, the specialized algorithms used by the GX-2i will make logical assumptions about the remaining club(s) if specific distances are not known for one or more of the remaining clubs.*

**Reminder: You cannot input a distance value less than or equal to the previous club. For example, if you choose 155 yards for your 8-iron, the lowest available distance for your 6-iron will be 160 yards.*

The procedure for inputting specific striking distance begins immediately after activating the Club Selector feature. Follow steps 1-5 above, under the heading "How Do I Activate the Club Selector?" Once the Club Selector has been activated, press MODE and follow the steps below:

1) The 8-iron symbol will be highlighted and the last saved distance will be shown in the upper numeric display. If you wish to input a distance other than the one shown, proceed to step 2. To save the shown distance for your 8-iron, press MODE and skip to step 3 below.
2) Press POWER to set the distance obtained with your 8-iron. Each depression of POWER will increase the distance associated with your

8-iron shot in 5-yard/meter increments beginning with the last saved distance, until 200 yards has been reached. Once 200 yards has been reached, it will reset to 60 yards, and start over again. When the appropriate distance is displayed, press MODE.

3) The 6-iron symbol will now be highlighted and the last saved distance will be shown in the upper numeric display. If you wish to input a distance other than the one shown, proceed to step 4. To save the shown distance for your 6-iron, press MODE and skip to step 5 below.

4) Press POWER to set the distance obtained with your 6-iron. Each depression of POWER will increase the distance associated with your 6-iron shot in 5-yard/meter increments beginning with the last saved distance, until 220 yards has been reached. Once 220 yards has been reached, it will reset to 80 yards, and start over again. When the appropriate distance is displayed, press MODE.

5) The 4-iron symbol will now be highlighted and the last saved distance will be shown in the upper numeric display. If you wish to input a distance other than the one shown, proceed to step 6. To save the shown distance for your 4-iron, let the unit sit idle for at least 20 seconds

until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another feature, press and release MODE until the appropriate icon is displayed.

6) Press POWER to set the distance obtained with your 4-iron shot in 5-yard/meter increments beginning with the last saved distance, until 240 yards has been reached. Once 240 yards has been reached, it will reset to 100 yards and start over again. When the appropriate distance is displayed, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another function, press and release MODE until the appropriate icon is displayed.

HOW DO I INPUT THE TEMPERATURE AND ALTITUDE AT WHICH THE STRIKING DISTANCE FOR EACH CLUB WAS MEASURED? (GX-2i ONLY)

The procedure for inputting the temperature and altitude at which each striking distance was measured begins immediately after inputting the specific club distances. Follow each of the steps above under "How Do I Activate the Club Selector?" and "How do I input the striking distance of the 8, 6 and 4-iron?" Once the striking distances have been input, press MODE and follow the steps below:

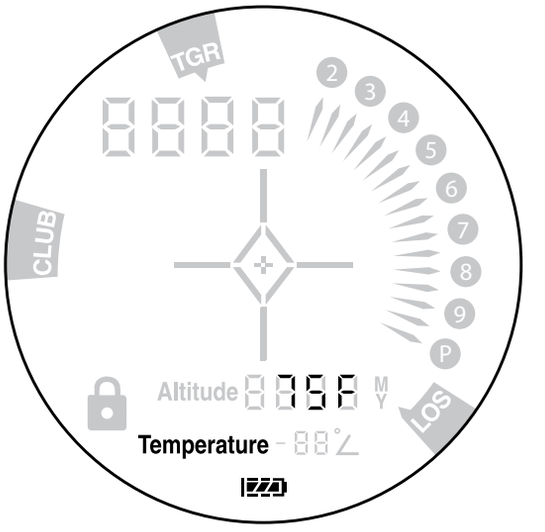

1) The last saved temperature will be flashing in the bottom portion of the display. If you wish to input a temperature other than the one shown, proceed to step 2. To save the shown temperature, press MODE and skip to step 3 below.

2) Press POWER to begin incrementing through the temperature settings. The default setting is 75 degrees F. Pressing POWER will increment through a range of 30 degrees to 120 degrees F in 5 degree increments. When the appropriate temperature is displayed, press MODE to save your selection and move on to the altitude input.

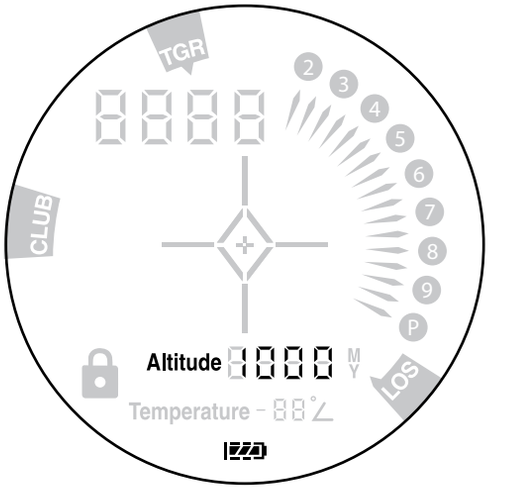

3) The last saved altitude will be flashing in the bottom portion of the display. If you wish to input an altitude other than the one shown, proceed to step 4. To save the shown altitude and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold Mode for at least 1 second.

To continue through the Quick Set Menu and manipulate another function, press and release MODE until the appropriate icon is displayed.

4) Press POWER to toggle through the altitude settings.
The default setting is 1,000 feet. Pressing POWER will toggle through a range of 0 feet to 9,999 feet in 500 foot increments. When the appropriate altitude is displayed, you have completed the input process for setting up the temperature and altitude at which the striking distances were measured. To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold Mode for at least 1 second. To continue through the Quick Set Menu and manipulate another function, press and release MODE until the appropriate icon is displayed.

FUNCTION 7: SELECTABLE RETICLES

This mode is used to choose from any one of 7 preloaded aiming reticles for your GX series digital laser rangefinder. To select a reticle, press MODE repeatedly until the reticle begins flashing. Each time POWER is depressed the reticle style will change. Press MODE to select a reticle. The reticle choices are as follows:

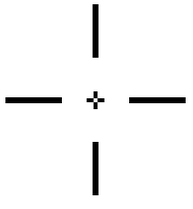

Reticle with Plus Point™

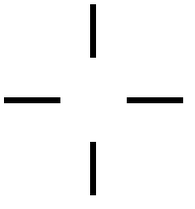

Reticle without Plus Point

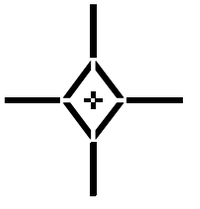

Diamond Plex with Plus Point

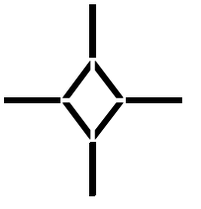

Diamond Plex

Plus Point™

Diamond with Plus Point

Diamond

How do I choose a particular aiming reticle/crosshair?

1) Press POWER to activate the rangefinder.
2) Press and hold MODE for at least 1 second to enter the Quick Set Menu.
3) Press and release MODE repeatedly until the reticle is flashing.
4) While the reticle is flashing, press and release POWER.
5) Continue pressing and releasing POWER until the desired reticle is flashing.
6) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and hold MODE for at least 1 second. To continue through the Quick Set Menu and manipulate another feature, press and release MODE until the appropriate icon is displayed.

FUNCTION 8: YARDS/METERS OUTPUT

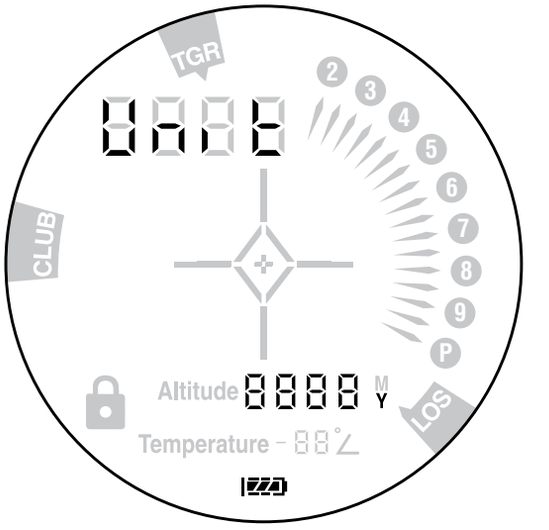

This mode allows you to toggle between yards or meters for the measurement output unit. TGR is displayed in large numbers just above the reticle; LOS is displayed in small numbers below and to the right of the reticle (above the angle readout). Press POWER to toggle between yards or meters. Press MODE to save your selection and move to the next function.

NOTE: *TGR is available on GX-2i models only. GX-1i models will only display LOS in large numbers above the reticle.*

HOW DO I ACTIVATE THE YARDS MODE?

1) Press POWER to activate the rangefinder.
2) Press and hold MODE for at least 1 second to enter the Quick Set Menu.
3) Press and release MODE until the word Unit is shown in the upper display.
4) While the word Unit is shown in the upper display, press and release POWER as necessary to toggle between yards and meters, which will be

shown in the lower right portion of the display.

5) To save the changes and return to ranging mode, let the unit sit idle for at least 20 seconds until an automatic power-down occurs, or simply press and release MODE.

NOTE: *If yards is selected, the temperature will automatically be measured by Fahrenheit. If meters is selected, the temperature will be measured in Celsius.*

Trouble Shooting

HOW DO I ACTIVATE THE INCLINOMETER? (GX-2i ONLY)

TGR must be activated, at which time the inclinometer will be activated automatically.

HOW DO I RESET THE UNIT TO FACTORY SETTINGS?

Press and hold POWER and MODE simultaneously for at least 10 seconds.

CAN I USE TGR WITHOUT MANUALLY INPUTTING DISTANCES FOR AN 8, 6, OR 4-IRON?

Yes, TGR can be used without entering the Club Selector values, it will simply use the default settings appropriate for the average player. Entering your specific values will improve accuracy up to one club length.

OTHER USEFUL FEATURES:

1. Hold MODE + POWER for at least 10 seconds to reset the unit to factory settings.
2. Hold MODE for at least 1 second to enter the Quick Set Menu, or to exit the Quick Set Menu and save all changes.
3. Pressing POWER will toggle menu options on/off, and increment through mode options.
4. Pressing MODE will cycle through menu options and save mode settings.

Cleaning/Maintenance

Blow away dust or debris on lenses, or use a soft lens brush (such as the one found on the Leupold LensPen). To remove fingerprints, water spots or tougher dirt, use a soft cotton cloth or the cleaning end of the Leupold LensPen. A lens tissue with lens cleaning fluid may be used for more stubborn dirt. Always apply cleaning fluid to the cleaning cloth, never directly to the lens.

To insert a new battery, remove the battery cover (shown in diagram on page 11) and remove exhausted battery. Insert new CR-2 battery, negative terminal first, in to the battery compartment. Close battery cover.

To focus the GX rangefinder, turn the eyepiece left or right (you will feel and hear the clicking of the diopter, indicating a change to the focus has been made) until crisp focus is achieved.

All GX series rangefinders are waterproof.

All GX rangefinders include a lanyard and are equipped with a lanyard attachment for added security in the field. GX-2i models are supplied with a small instruction supplement in the inside pocket of the included case.

Warranty/Repair

Your Leupold GX Series digital laser rangefinder is warranted by the Leupold non-Golden Ring Electronic Warranty, and is protected from defects in materials and workmanship for one year from the date of purchase. Any warranty claim must be accompanied by a copy of the origianl receipt showing the date of purchase. In the event of a need for service or repair, please contact Leupold Product Service at:

BY PARCEL SERVICE:

Leupold Product Service
14400 NW Greenbrier Parkway
Beaverton, OR 97006-5791 USA

BY POSTAL SERVICE:

Leupold Product Service
P.O. Box 688
Beaverton, OR 97075-0688 USA

For product questions, consult the Leupold Web site at:
www.leupold.com, or call (503) 526-1400 or (800) LEUPOLD (538-7653).

Please take a few minutes to register your product at leupold.com/register.

For product questions, consult the Leupold Web site at:

www.leupold.com, or call (503) 526-1400 or (800) LEUPOLD (538-7653).

LEUPOLD, GOLDEN RING, MARK 4, the Golden Ring design, the circle-L reticle logo design, and various other marks are registered trademarks of Leupold & Stevens, Inc. All marks, including corporate logos and emblems, are subject to Leupold's rights and may not be used in connection with any product or service that is not Leupold's, or in any manner that disparages or discredits Leupold, or in a manner likely to cause confusion.

Certain other trademarks used in connection with Leupold products and services are the property of their respective owners, and are used with permission. BOONE AND CROCKETT CLUB and BOONE AND CROCKETT are registered trademarks of the Boone and Crockett Club. NWTF is a registered trademark of the National Wild Turkey Federation. QDMA, and QUALITY DEER MANAGEMENT are trademarks or registered trademarks of the Quality Deer Management Association. RMEF and ROCKY MOUNTAIN ELK FOUNDATION are registered trademarks of the Rocky Mountain Elk Foundation. ADVANTAGE TIMBER and ADVANTAGE TIMBER HD are trademarks or registered trademarks of Jordan Outdoor Enterprises Ltd. MOSSY OAK BREAK-UP, MOSSY OAK BRUSH, MOSSY OAK OBSESSION, and MOSSY OAK TREESTAND are trademarks or registered trademarks of HAAS Outdoors, Inc. A.R.M.S. is a registered trademark of Atlantic Research Marketing Systems, Inc. The ARD (anti-reflection device) is manufactured by Tenebraex Corp. under the name KillFlash, which is a trademark of Tenebraex Corp.

We reserve the right to make design and/or material modifications without prior notice.

Copyright © 2012 Leupold & Stevens, Inc. All rights reserved.

Notes

Notes

Notes

www.leupold.com

Part # 117332
Artwork # 117335